

INSTALLATION INSTRUCTIONS


for Troldtekt® rhomb mini/rhomb hatch mini, installed with screws

These instructions apply to the installation of Troldtekt® rhomb mini/rhomb hatch mini with screws on wood battens or steel profile system. If you install Troldtekt® on wood battens, the battens should be min. 22 x 95 mm. You can download installation instructions for wood battens from www.troldtekt.com.

INSTALLATION


Fix the panels using Troldtekt screws spaced 25/20 mm from the edges – as shown in the figures below. Be careful not to overdrive the screw and so cause an indentation in the panel.

PROFILE DRAWING (INDEPENDENT OF SUSPENSION)

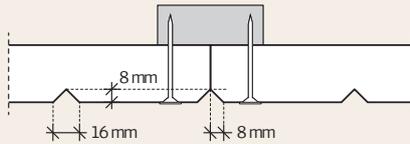


With 8 mm bevel and rebate

PANEL DIMENSIONS

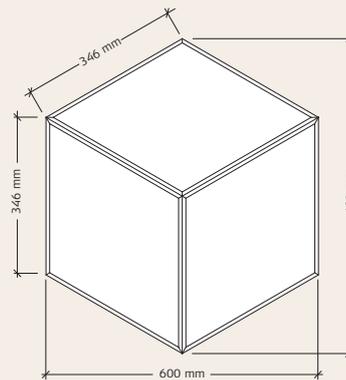


Troldtekt® rhomb mini

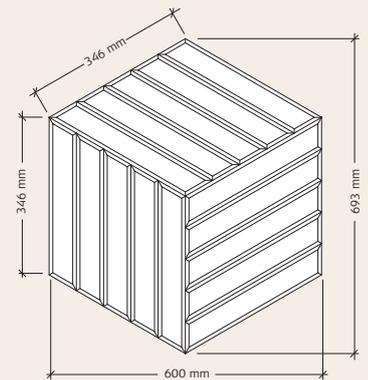


Troldtekt® rhomb hatch mini

ILLUSTRATION - INSTALLATION

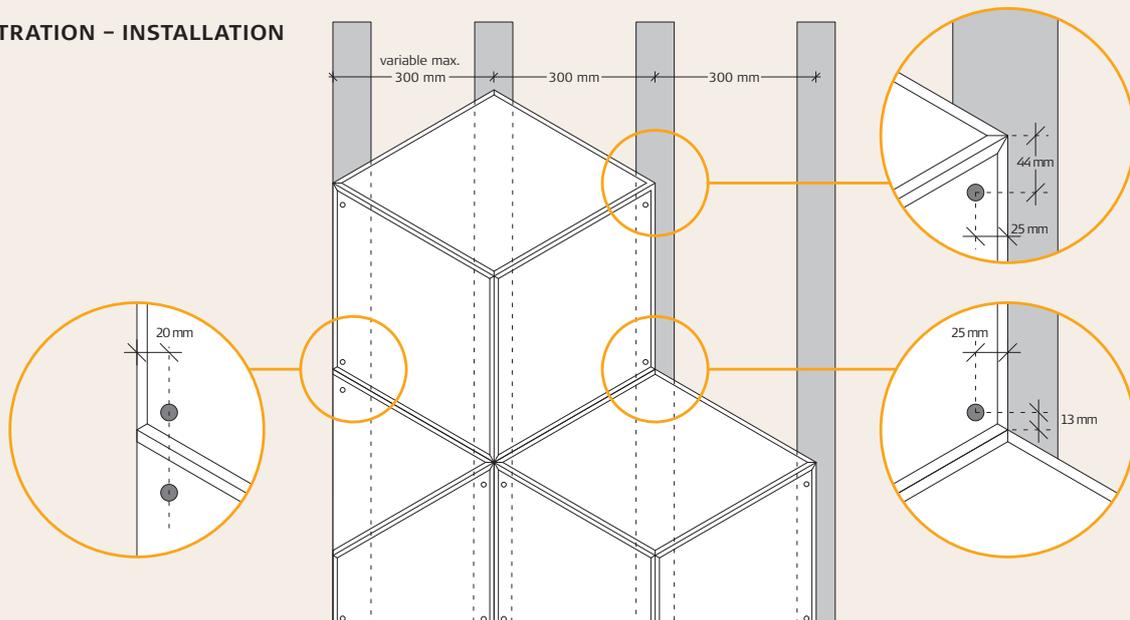

VAPOUR BARRIER

If you need to install a vapour barrier, we recommend using polyethylene plastic sheeting. The vapour barrier must be placed behind the wood battens. Install the vapour barrier so it is well-stretched and sits tightly against the insulation.

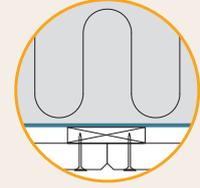

TROLDTEKT[®] SCREWS

Panel thickness (mm)	Panel length (mm)	Area (m ²)	Screw dimension (mm)	No. of screws (per panel)	Max. span (mm)
35	600	0.31	4.2 x 45 / 4.2 x 55 / 4.2 x 50	4	600

Troldekt structure screw
for wood and steel, PH2

4.2x45 mm / 4.2x55 mm



Troldekt structure screw
for steel, PH2

4.2x50 mm



This document reflects Troldekt's knowledge of certifications, standards, and products at the time of publication.

No rights can be derived from this document.
Changes, typesetting and printing errors reserved.

The most recent version can be found online by scanning the QR code.

JANUARY 2026 EN V01

Troldekt A/S
Sletvej 2A
DK - 8310 Tranbjerg J
Tel. +45 8747 8100
info@troldekt.dk
www.troldekt.com